


TENSION WHEEL INSTRUCTIONS




Step 1: Position handle in tightener. Then place slot along fence wire.

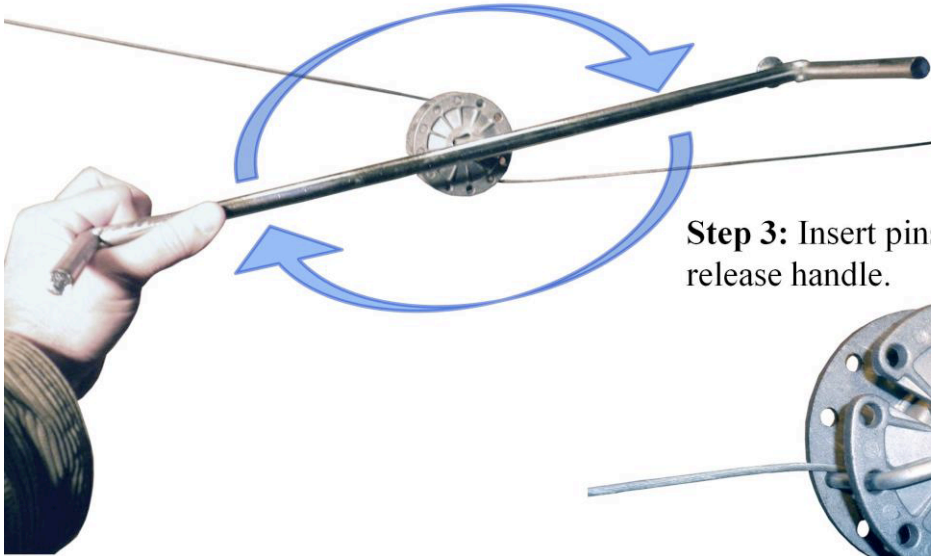

Step 2: Crank handle to tension wire. When suitable tension is obtained, rest handle on wire by hooking the circular knob of the handle below the wire.

Step 3: Insert pins behind wheel. Then release handle.

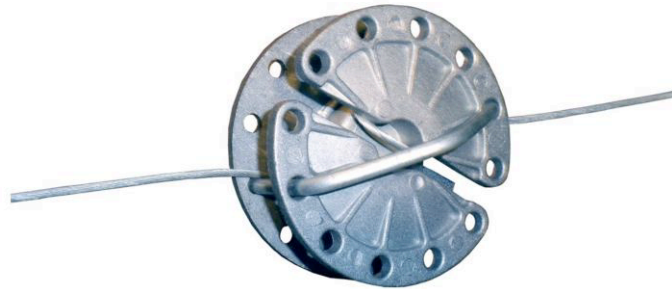

**MARGO
SUPPLIES**
Wildlife Management
Technology